


How to Operate Keypad Up to 4 Miles from the Panel!

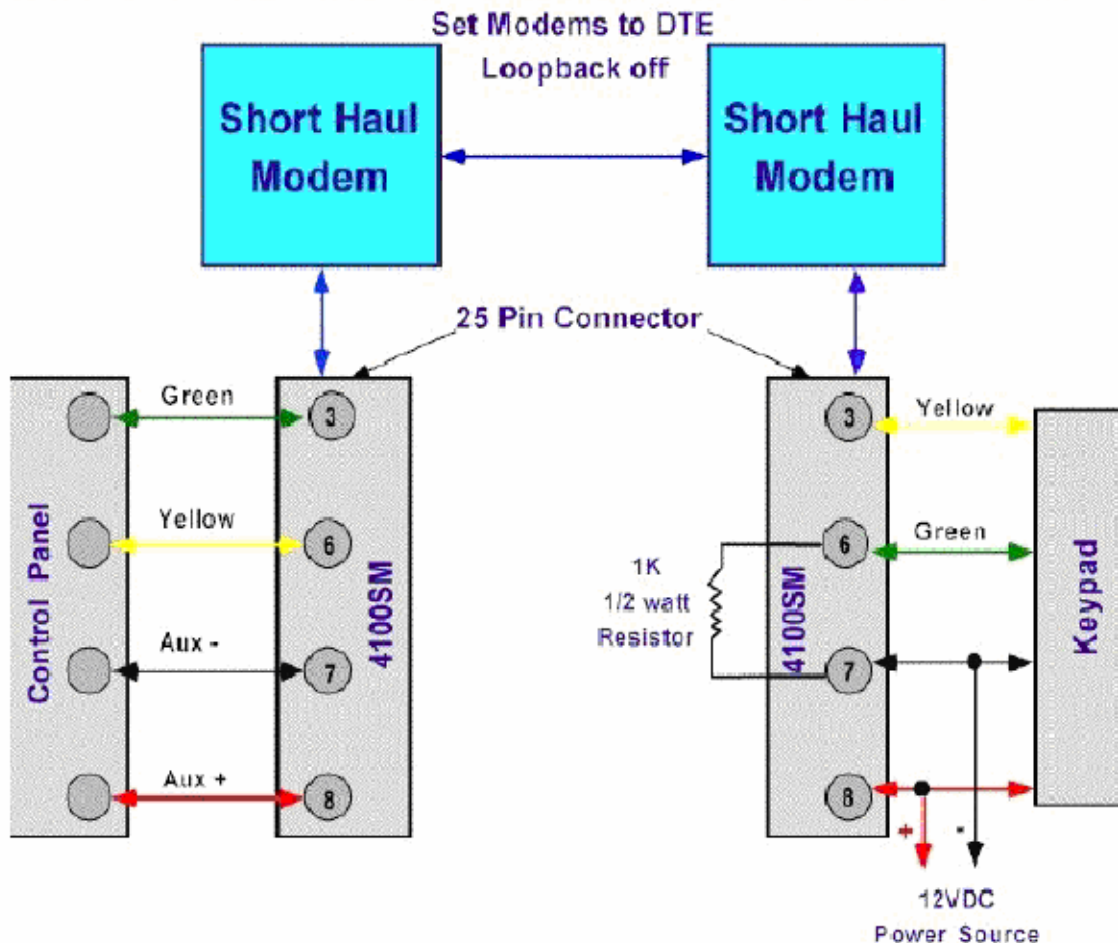

Up to 4 Miles distance, only one per panel. As per Black Box you can use part number LD-485A or others. You MUST have a common ground back to the panel in order for the keypad to work properly. If you are experiencing problems with the module contact Black Box at phone number is 877-877-2269.

NOTE: INFORMATION BELOW WAS REMOVED AFTER PART NUMBER FOUND INVALID

You can also use Fiber Optic cable from null modem to null modem with ME606A-MST RS232 to Fiber interface module and PS576 power supply at each null modem. Range is 2 miles. There are a few jumper connections on the Black Box module and they should be set as follows: Jumper W-15 should be in the A-B position, Switch S2 should be set to the TERM position, Jumper W8 should be set to the A-B position, and W9 should be ON. You will also need to move the chip located in socket 'DTEXW1B' to the socket labeled 'DCEXW1A'.