

# New Zealand Programming Defaults

## For use with PC1616/1832/1864 v4.5 Installation Guide

This document identifies the default settings for PC1616/1832/1864 v4.5 Alarm Panels where they differ from the standard defaults found in the accompanying Installation Manual (part number 29007861).

Sect.	Description	Setting
[001]	Zone Definitions 1-8	01 03 03 03 03 03 03 03
[013]	1st System Option Code Opt [6]	Disabled
[017]	2nd System Option Code Opt [6]	Enabled

### Daylight Savings

[168]	Daylight Saving Time StartMonth	009
	Daylight Saving Time StartWeek	005
[169]	Daylight Saving Time EndMonth	004

### Reporting Codes

[320]-[323]	Alarm Reporting Codes (Zones 01-64)	11
[329]	Priority Alarm and Restoral	
	Keypad Fire Alarm	11
	Keypad Aux. Alarm	11
	Keypad Panic Alarm	11
	Auxiliary Input Alarm	11
<b>NOTE: The Restoral defaults remain FF.</b>		
[347]	Miscellaneous Reporting Codes	
	Event Buffer 75% Full	00

### Communications

[350]	Communicator Format Options	03 03
Communicator Call Directions		
[367]-[374]	Partition 1-8 Opening/Closing	ON OFF OFF OFF OFF OFF OFF OFF
[377]	Communication Variables	
	AC Failure Comm Delay	010
	Test Transmission Cycle	001
[380]	1st Communicator Option Codes / Opt [6]	Enabled
[381]	2nd Communicator Option Codes / Opt [5]	Disabled
	Opt [6]	Disabled

### PGMs

[501]	PGM Output Attributes	
	PGM [19] Command Output #1	OFF OFF ON ON OFF OFF OFF OFF

### International Options

[701]	1st International Option Codes	
	Opt [1] 50 Hz AC	Enabled



A Tyco International Company

© 2011 Tyco International Ltd. and its  
Respective Companies. All Rights  
Reserved. Printed in Canada



29007927R002